



Town of Brighton

VERMONT

Request for Proposal (RFP) for Painting of Brighton Town Hall

Project Name: Painting and Preservation of Brighton Town Hall – Historic Restoration Project

Project Location: 49 Mill St. Ext., Island Pond, VT 05846

Date Issued: March 11, 2026

Proposal Due Date: April 6, 2026 4:30 PM

1. Introduction

The Town of Brighton is soliciting proposals from qualified contractors with experience in historic preservation to undertake the painting of the historic Brighton Town Hall. The project will be guided by the Secretary of the Interior Standards for Treatment of Historic Buildings.

The purpose of this project is to ensure the proper preservation of the historic building's exterior by applying paint in a manner that protects the structure while maintaining its historic character.

2. Project Background

The Brighton Town Hall, known historically as the "Opera House", constructed in 1889, is a historically significant structure, listed on National Register of Historic Places/Local Historic Register. Its exterior wooden elements, including siding, windows, doors, trim, and architectural details, require repainting and some careful restoration to preserve the building's integrity and aesthetics. The exterior of the building was completely renovated in 2012, when deteriorating vinyl siding was removed and the building sided with western red cedar clapboards, and painted with latex paint. The building exterior is under an easement from the Preservation Trust of Vermont and the project will require their acknowledgment.

3. Scope of Work

The selected contractor will provide all necessary labor, materials, equipment, and services to perform the following tasks in accordance with Preservation Brief No. 10 where appropriate, but it is understood that since all the exterior siding and woodwork is only 12 years old, this is essentially new construction. There are not several layers of old paint on old clapboards.

3.1 Surface Preparation

- Assess existing paint for condition and adherence. Surface must be cleaned of dirt, grime, cobwebs, insect cocoons and any other material that would affect adhesion of the new paint.
- Remove deteriorated, flaking, and loose paint using the gentlest means possible. Open-flame torches, or heat guns are not permitted.
- Conduct paint sampling to determine original color schemes if requested by the Owner.

3.2 Repair of Woodwork

- Inspect all wood elements for rot, decay, and damage. Repair or replace damaged wood sections using materials matching the original in dimension, profile, and species.
- Any replacement wood should be primed before installation.
- Ensure all repairs are carried out in accordance with best practices for historic preservation, maintaining the building's historic character.

3.3 Priming and Painting

- Lightly sand all surfaces to be painted, using the least aggressive means possible.
- Paint edges, faces, ends, and undersides of clapboards
- Use latex paint applied in accordance with manufacturer's directions. Paint shall be the same paint as existing paint. If that paint is no longer available, select the closest to it .
- Apply paint only when temperature of surface to be painted and ambient air temperatures are between 50 and 95 degrees (10 and 35 deg C).
- Do not apply paint in snow, rain, fog, or mist; when relative humidity exceeds 85 percent; at temperatures less than 5 deg (3degC) above the dew point, or to damp or wet surfaces.
- When measured with an electronic moisture meter, the maximum moisture content of substrates.
- Remove hardware, covers, plates and similar items already in place that are removable and are not to be painted. If removal is impractical or impossible because of size or weight, provide surface-applied protection before surface preparation and painting.
- Paint shall comply with MPI standards.
- Apply paint in accordance with manufacturer's written instructions and recommendations in "MPI Manual and "MPI Maintenance Re-painting Manual."
- Paint surfaces behind movable items same as similar exposed surfaces
- Paint both sides and edges of exterior doors and entire exposed surface of exterior door frames.
- Paint entire exposed surface of window frames and sashes
- Do not paint over labels of independent testing agencies or equipment name, identification, performance rating, or nomenclature plates.
- Apply paints to produce surface films without cloudiness, spotting, holidays, laps, brush marks, roller tracking, runs, sags, ropiness, or other surface imperfections. Cut in sharp lines and color breaks.
- Paint the following work where exposed to view:
 - * Equipment, including panel boards
 - * Uninsulated metal piping
 - * Uninsulated plastic piping
 - * Pipe hangars and supports
 - * Metal conduit
 - * Plastic conduit
 - * Tanks that do not have factory-applied final finishes
- Paints must match the historic color scheme of the building unless otherwise specified by the Owner.

3.4 Cleanup and Final Inspection

- Remove all equipment, debris, and materials from the site.
- Protect adjacent surfaces not being painted (e.g., windows, doors, landscaping).
- Conduct a final inspection with the Town of Brighton representative and the Preservation Trust to ensure all work meets the standards outlined in Preservation Brief No. 10 and the contract specifications.

4. Contractor Qualifications

The successful contractor must demonstrate:

- Experience in historic preservation projects, specifically those involving the painting of historic wooden buildings.
- Knowledge of and adherence to the standards in Preservation Brief No. 10 and other applicable preservation guidelines.
- Proper licensing, insurance, and bonding to perform work in the project's jurisdiction.
- Lead-safe certification for work involving older buildings, where applicable.

5. Proposal Requirements

Proposals should include the following information:

- Company name, address, and contact information.
- Summary of experience with similar projects.
- Detailed work plan outlining methods and materials to be used in surface preparation, repair, priming, and painting.
- Timeline for completion of the project, including start date and major milestones.
- Cost breakdown including labor, materials, and any other relevant expenses.
- At least three references from previous clients for similar projects, preferably with photos..
- Certificate of Insurance

6. Evaluation Criteria

Proposals will be evaluated based on the following criteria:

- Contractor's experience with similar projects.
- Contractor's references.
- Overall approach to the project, including methodology and materials proposed.
- Timeline for project completion.
- Cost reasonableness and breakdown.
- Compliance with historic preservation standards and familiarity with Preservation Brief No. 10.

7. Submission Instructions

Proposals may be mailed to the below address and must be received by 4:30 PM, April 6, 2026 or submitted electronically to townmanager@brightonvt.gov. Proposals received after the due date will not be considered.

Town of Brighton
P.O. Box 377
Island Pond, VT 05846
TownManager@brightonvt.gov
1-802-266-1054

8. Site Visits

Interested contractors are encouraged to visit the town hall at 49 Mill St. Ext., Island Pond to have an opportunity to inspect the building and ask questions about the project. Please arrange a time and date before visiting to ensure someone is available.

9. Contact Information

For questions or further information, please contact:

Mike Strait, Brighton Town Manager 802-266-1054 townmanager@brightonvt.gov

Joel Cope, Brighton Administrator 802-487-7714 admin@brightonvt.gov

****Attachment A:****

- Preservation Brief No. 10: “Exterior Paint Problems on Historic Woodwork”

This RFP is issued in accordance with local, state, and federal historic preservation regulations. The selected contractor will be expected to comply with all applicable laws, codes, and standards. The Town reserves the right to waive any formalities or minor defects, or to accept any or reject all bids. The contractors submitting bids will be notified of the Town’s intent within 15 days after the bids are opened.

10 PRESERVATION BRIEFS

Exterior Paint Problems on Historic Woodwork

Kay D. Weeks and David W. Look, AIA



U.S. Department of the Interior
National Park Service
Cultural Resources
Heritage Preservation Services

A cautionary approach to paint removal is included in the guidelines to "The Secretary of the Interior Standards for Historic Preservation Projects." Removing paints down to bare wood surfaces using harsh methods can permanently damage those surfaces; therefore such methods are not recommended. Also, total removal obliterates evidence of the historical paints and their sequence and architectural context.

This Brief expands on that advice for the architect, building manager, contractor, or homeowner by identifying and describing common types of paint surface conditions and failures, then recommending appropriate treatments for preparing exterior wood surfaces for repainting¹ to assure the best adhesion and greatest durability of the new paint. Although the Brief focuses on responsible methods of "paint removal," several paint surface conditions will be described which do not require any paint removal, and still others which can be successfully handled by limited paint removal. In all cases, the information is intended to address the concerns related to *exterior wood*. It will also be generally assumed that, because houses built before 1950 involve one or more layers of lead-base paint,² the majority of conditions warranting paint removal will mean dealing with this toxic substance along with the dangers of the paint removal tools and chemical strippers themselves.

Purposes of Exterior Paint

Paint³ applied to exterior wood must withstand yearly extremes of both temperature and humidity. While never expected to be more than a temporary physical shield—requiring re-application every 5-8 years—its importance should not be minimized. Because one of the main causes of wood deterioration is moisture penetration, a primary purpose for painting wood is to exclude such moisture, thereby slowing deterioration not only of a building's exterior siding and decorative features but, ultimately, its underlying structural members. Another important purpose for painting wood is, of course, to define and accent architectural features and to improve appearance.

Treating Paint Problems in Historic Buildings

Exterior paint is constantly deteriorating through the processes of weathering, but in a program of regular maintenance—assuming all other building systems are functioning properly—surfaces can be cleaned, lightly scraped, and hand sanded in preparation for a new finish coat. Unfortunately, these are ideal conditions. More often, complex maintenance problems are inherited by owners of

historic buildings, including areas of paint that have failed⁴ beyond the point of mere cleaning, scraping, and hand sanding (although much so-called "paint failure" is attributable to interior or exterior moisture problems or surface preparation and application mistakes with previous coats).

Although paint problems are by no means unique to historic buildings, treating multiple layers of hardened, brittle paint on complex, ornamental—and possibly fragile—exterior wood surfaces necessarily requires an extremely cautious approach (see figure 1). In the case of recent construction, this level of concern is not needed because the wood is generally less detailed and, in addition, retention of the sequence of paint layers as a partial record of the building's history is not an issue.

When historic buildings are involved, however, a special set of problems arises—varying in complexity depending upon their age, architectural style, historical importance, and physical soundness of the wood—which must be carefully evaluated so that decisions can be made that are sensitive to the longevity of the resource.

Justification for Paint Removal

At the outset of this Brief, it must be emphasized that removing paint from historic buildings—with the exception of cleaning, light scraping, and hand sanding as part of routine maintenance—should be avoided unless absolutely essential. *Once conditions warranting removal have*

¹ General paint type recommendations will be made, but paint color recommendations are beyond the scope of this Brief.

² Douglas R. Shier and William Hall, *Analysis of Housing Data Collected in a Lead-Based Paint Survey in Pittsburgh, Pennsylvania, Part I*. National Bureau of Standards, Inter-Report 77-1250, May 1977.

³ Any pigmented liquid, liquefiable, or mastic composition designed for application to a substrate in a thin layer which is converted to an opaque solid film after application. *Paint and Coatings Dictionary*, 1978. Federation of Societies for Coatings and Technology.

⁴ For purposes of the Brief, this includes any area of painted exterior woodwork displaying signs of peeling, cracking, or alligating to bare wood. See descriptions of these and other paint surface conditions as well as recommended treatments on pp. 5-10.



Fig. 1 Excessive paint build-up on architectural details such as this ornamental bracket does not in itself justify total paint removal. If paint is cracked and peeling down to bare wood, however, it should be removed using the gentlest means possible. Photo: David W. Look, AIA.

been identified, the general approach should be to remove paint to the next sound layer using the gentlest means possible, then to repaint (see figure 2). Practically speaking as well, paint can adhere just as effectively to existing paint as to bare wood, providing the previous coats of paint are also adhering uniformly and tightly to the wood and the surface is properly prepared for repainting—cleaned of dirt and chalk and dulled by sanding. But, if painted exterior wood surfaces display continuous patterns of deep cracks or if they are extensively blistering and peeling so that bare wood is visible, then the old paint should be completely removed before repainting. The only other justification for removing all previous layers of paint is if doors, shutters, or windows have literally been “painted shut,” or if new wood is being pieced-in adjacent to old painted wood and a smooth transition is desired (see figure 3).

Paint Removal Precautions

Because paint removal is a difficult and painstaking process, a number of costly, regrettable experiences have occurred—and continue to occur—for both the historic building and the building owner. Historic buildings have been set on fire with blow torches; wood irreversibly scarred by sandblasting or by harsh mechanical devices such as rotary sanders and rotary wire strippers; and layers of historic paint inadvertently and unnecessarily removed. In addition, property owners, using techniques that substitute speed for safety, have been injured by toxic lead vapors or dust from the paint they were trying to

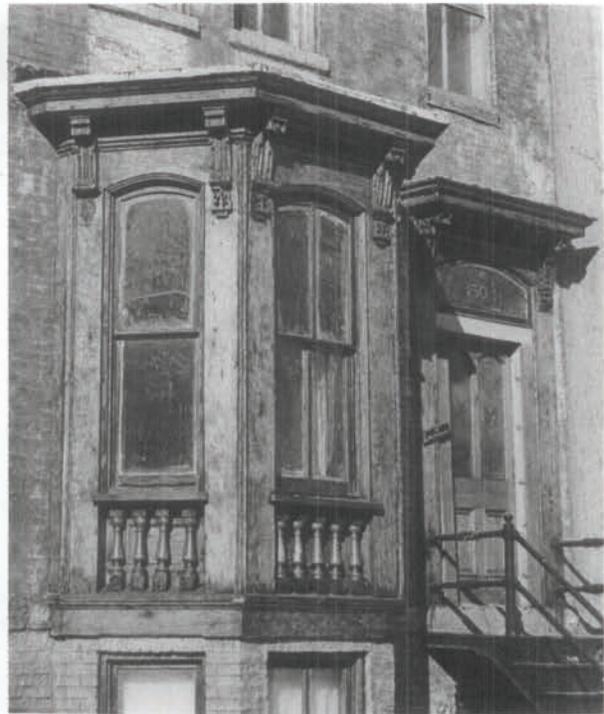


Fig. 2 A traditionally painted bay window has been stripped to bare wood, then varnished. In addition to being historically inaccurate, the varnish will break down faster as a result of the sun's ultraviolet rays than would primer and finish coats of paint. Photo: David W. Look, AIA.

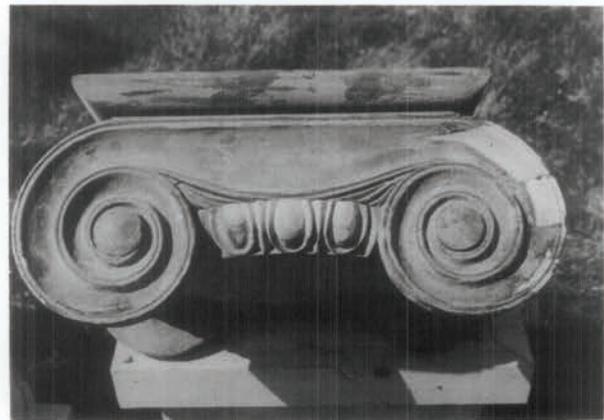


Fig. 3 If damage to parts of a wooden element is severe, new sections of wood will need to be pieced-in. When such piecing is required, paint on the adjacent woodwork should be removed so that the old and new woods will make a smooth profile when joined. After repainting, the repair should be virtually impossible to detect. Photo: Morgan W. Phillips.

remove or by misuse of the paint removers themselves.

Owners of historic properties considering paint removal should also be aware of the amount of time and labor involved. While removing damaged layers of paint from a door or porch railing might be readily accomplished within a reasonable period of time by one or two people, removing paint from larger areas of a building can, with-

out professional assistance, easily become unmanageable and produce less than satisfactory results. The amount of work involved in any paint removal project must therefore be analyzed on a case-by-case basis. Hiring qualified professionals will often be a cost-effective decision due to the expense of materials, the special equipment required, and the amount of time involved. Further, paint removal companies experienced in dealing with the inherent health and safety dangers of paint removal should have purchased such protective devices as are needed to mitigate any dangers and should also be aware of State or local environmental and/or health regulations for hazardous waste disposal.

All in all, paint removal is a messy, expensive, and potentially dangerous aspect of rehabilitating or restoring historic buildings and should not be undertaken without careful thought concerning first, its necessity, and second, which of the available recommended methods is the safest and most appropriate for the job at hand.

Repainting Historic Buildings for Cosmetic Reasons

If existing exterior paint on wood siding, eaves, window sills, sash, and shutters, doors, and decorative features shows no evidence of paint deterioration such as chalking, blistering, peeling, or cracking, then there is no *physical reason* to repaint, much less remove paint! Nor is color fading, of itself, sufficient justification to repaint a historic building.

The decision to repaint may not be based altogether on paint failure. Where there is a new owner, or even where ownership has remained constant through the years, taste in colors often changes. Therefore, if repainting is primarily to alter a building's primary and accent colors, a technical factor of paint accumulation should be taken into consideration. When paint builds up to a thickness of approximately 1/16" (approximately 16-30 layers), one or more extra coats of paint may be enough to trigger cracking and peeling in limited or even widespread areas of the building's surface. This results because excessively thick paint is less able to withstand the shrinkage or pull of an additional coat as it dries and is also less able to tolerate thermal stresses. Thick paint invariably fails at the weakest point of adhesion—the oldest layers next to the wood. Cracking and peeling follow. Therefore, if there are no signs of paint failure, it may be somewhat risky to add still another layer of unneeded paint simply for color's sake (extreme changes in color may also require more than one coat to provide proper hiding power and full color). When paint appears to be nearing the critical thickness, a change of accent colors (that is, just to limited portions of the trim) might be an acceptable compromise without chancing cracking and peeling of paint on wooden siding.

If the decision to repaint is nonetheless made, the "new" color or colors should, at a minimum, be appropriate to the style and setting of the building. On the other hand, where the intent is to restore or accurately reproduce the colors originally used or those from a significant period in the building's evolution, they should be based on the results of a paint analysis.⁵

Identification of Exterior Paint Surface Conditions/Recommended Treatments

It is assumed that a preliminary check will already have been made to determine, first, that the painted exterior surfaces are indeed wood—and not stucco, metal, or other wood substitutes—and second, that the wood has not decayed so that repainting would be superfluous. For example, if any area of bare wood such as window sills has been exposed for a long period of time to standing water, wood rot is a strong possibility (see figure 4). Repair or replacement of deteriorated wood should take place before repainting. After these two basic issues have been resolved, the surface condition identification process may commence.

The historic building will undoubtedly exhibit a variety of exterior paint surface conditions. For example, paint on the wooden siding and doors may be adhering firmly; paint on the eaves peeling; and paint on the porch balusters and window sills cracking and alligating. The accurate identification of each paint problem is therefore the first step in planning an appropriate overall solution.

Paint surface conditions can be grouped according to their relative severity: CLASS I conditions include minor blemishes or dirt collection and generally require *no* paint removal; CLASS II conditions include failure of the top layer or layers of paint and generally require *limited* paint removal; and CLASS III conditions include substantial or multiple-layer failure and generally require *total* paint removal. It is precisely because conditions will vary at different points on the building that a careful inspection is critical. Each item of painted exterior woodwork (i.e., siding, doors, windows, eaves, shutters, and decorative elements) should be examined early in the planning phase and surface conditions noted.

CLASS I Exterior Surface Conditions Generally Requiring No Paint Removal

- Dirt, Soot, Pollution, Cobwebs, Insect Cocoons, etc.

Cause of Condition

Environmental "grime" or organic matter that tends to cling to painted exterior surfaces and, in particular, protected surfaces such as eaves, do not constitute a paint problem unless painted over rather than removed prior to repainting. If not removed, the surface deposits can be a barrier to proper adhesion and cause peeling.

Recommended Treatment

Most surface matter can be loosened by a strong, direct stream of water from the nozzle of a garden hose. Stubborn dirt and soot will need to be scrubbed off using ½ cup of household detergent in a gallon of water with a medium soft bristle brush. The cleaned surface should then be rinsed thoroughly, and permitted to dry before further inspection to determine if repainting is necessary. Quite often, cleaning provides a satisfactory enough result to postpone repainting.

⁵ See the Reading List for paint research and documentation information. See also *The Secretary of the Interior's Standards for Historic Preservation Projects with Guidelines for Applying the Standards* for recommended approaches on paints and finishes within various types of project work treatments.

- **Mildew**

Cause of Condition

Mildew is caused by fungi feeding on nutrients contained in the paint film or on dirt adhering to any surface. Because moisture is the single most important factor in its growth, mildew tends to thrive in areas where dampness and lack of sunshine are problems such as window sills, under eaves, around gutters and downspouts, on the north side of buildings, or in shaded areas near shrubbery. It may sometimes be difficult to distinguish mildew from dirt, but there is a simple test to differentiate: if a drop of household bleach is placed on the suspected surface, mildew will immediately turn white whereas dirt will continue to look like dirt.

Recommended Treatment

Because mildew can only exist in shady, warm, moist areas, attention should be given to altering the environment that is conducive to fungal growth. The area in question may be shaded by trees which need to be pruned back to allow sunlight to strike the building; or may lack rain gutters or proper drainage at the base of the building. If the shady or moist conditions can be altered, the mildew is less likely to reappear. A recommend solution for removing mildew consists of one cup non-ammoniated detergent, one quart household bleach, and one gallon water. When the surface is scrubbed with this solution using a medium soft brush, the mildew should disappear; however, for particularly stubborn spots, an additional quart of bleach may be added. After the area is mildew-free, it should then be rinsed with a direct stream of water from the nozzle of a garden hose, and permitted to dry thoroughly. When repainting, specially formulated "mildew-resistant" primer and finish coats should be used.

- **Excessive Chalking**

Cause of Condition

Chalking—or powdering of the paint surface—is caused by the gradual disintegration of the resin in the paint film. (The amount of chalking is determined both by the formulation of the paint and the amount of ultraviolet light to which the paint is exposed.) In moderation, chalking is the ideal way for a paint to "age," because the chalk, when rinsed by rainwater, carries discoloration and dirt away with it and thus provides an ideal surface for repainting. In excess, however, it is not desirable because the chalk can wash down onto a surface of a different color beneath the painted area and cause streaking as well as rapid disintegration of the paint film itself. Also, if a paint contains too much pigment for the amount of binder (as the old white lead carbonate/oil paints often did), excessive chalking can result.

Recommended Treatment

The chalk should be cleaned off with a solution of ½ cup household detergent to one gallon water, using a medium soft bristle brush. After scrubbing to remove the chalk, the surface should be rinsed with a direct stream of water from the nozzle of a garden hose, allowed to dry thoroughly, (but not long enough for the chalking process to recur) and repainted, using a non-chalking paint.

- **Staining**

Cause of Condition

Staining of paint coatings usually results from excess

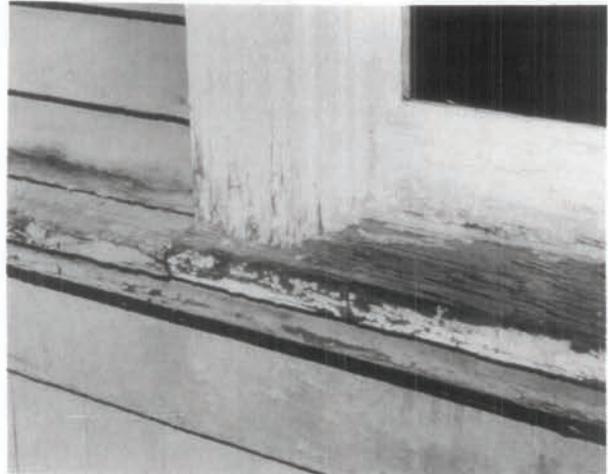


Fig. 4 Paint films wear unevenly depending on exposure and location. Exterior locations which are susceptible to accelerated deterioration are horizontal surfaces such as window sills. These and similar areas will require repainting more often than less vulnerable surfaces. In the case of this window sill where paint has peeled off and adjacent areas have cracked and alligatored, the paint should be totally removed. Prior to repainting, any weathered wood should be rejuvenated using a solution of 3 cups exterior varnish, 1 oz. paraffin wax, and mineral spirits/paint thinner/or turpentine to make 1 gallon. Liberal brush application should be made. This formula was tested over a 20-year period by the U.S. Department of Agriculture's Forest Products Laboratory and proved to be just as effective as water-repellent preservatives containing pentachlorophenol. After the surface has thoroughly dried (2-3 days of warm weather), the treated surface can be painted. A high quality oil-base primer followed by two top coats of a semi-gloss oil-enamel or latex-enamel paint is recommended. Photo: Baird M. Smith, AIA.

moisture reacting with materials within the wood substrate. There are two common types of staining, neither of which requires paint removal. The most prevalent type of stain is due to the oxidation or rusting of iron nails or metal (iron, steel, or copper) anchorage devices. A second type of stain is caused by a chemical reaction between moisture and natural extractives in certain woods (red cedar or redwood) which results in a surface deposit of colored matter. This is most apt to occur in new replacement wood within the first 10-15 years.

Recommended Treatment

In both cases, the source of the stain should first be located and the moisture problem corrected.

When stains are caused by rusting of the heads of nails used to attach shingles or siding to an exterior wall or by rusting or oxidizing iron, steel, or copper anchorage devices adjacent to a painted surface, the metal objects themselves should be hand sanded and coated with a rust-inhibitive primer followed by two finish coats. (Exposed nail heads should ideally be countersunk, spot primed, and the holes filled with a high quality wood filler except where exposure of the nail head was part of the original construction system or the wood is too fragile to withstand the countersinking procedure.)

Discoloration due to color extractives in replacement wood can usually be cleaned with a solution of equal parts denatured alcohol and water. After the affected area

has been rinsed and permitted to dry, a "stain-blocking primer" especially developed for preventing this type of stain should be applied (two primer coats are recommended for severe cases of bleeding prior to the finish coat). Each primer coat should be allowed to dry at least 48 hours.

CLASS II Exterior Surface Conditions Generally Requiring Limited Paint Removal

- **Crazing**

Cause of Condition

Crazing—fine, jagged interconnected breaks in the top layer of paint—results when paint that is several layers thick becomes excessively hard and brittle with age and is consequently no longer able to expand and contract with the wood in response to changes in temperature and humidity (see figure 5). As the wood swells, the bond between paint layers is broken and hairline cracks appear. Although somewhat more difficult to detect as opposed to other more obvious paint problems, it is well worth the time to scrutinize all surfaces for crazing. If not corrected, exterior moisture will enter the crazed surface, resulting in further swelling of the wood and, eventually, deep cracking and alligatoring, a Class III condition which requires total paint removal.

Recommended Treatment

Crazing can be treated by hand or mechanically sanding the surface, then repainting. Although the hairline cracks may tend to show through the new paint, the surface will be protected against exterior moisture penetration.



Fig. 5 Crazing—or surface cracking—is an exterior surface condition which can be successfully treated by sanding and painting. Photo: Courtesy, National Decorating Products Association.

- **Intercoat Peeling**

Cause of Condition

Intercoat peeling can be the result of improper surface preparation prior to the last repainting. This most often occurs in protected areas such as eaves and covered porches because these surfaces do not receive a regular rinsing from rainfall, and salts from air-borne pollutants thus accumulate on the surface. If not cleaned off, the new paint coat will not adhere properly and that layer will peel.

Another common cause of intercoat peeling is incompatibility between paint types (see figure 6). For example, if oil paint is applied over latex paint, peeling of the top

coat can sometimes result since, upon aging, the oil paint becomes harder and less elastic than the latex paint. If latex paint is applied over old, chalking oil paint, peeling can also occur because the latex paint is unable to penetrate the chalky surface and adhere.

Recommended Treatment

First, where salts or impurities have caused the peeling, the affected area should be washed down thoroughly after scraping, then wiped dry. Finally, the surface should be hand or mechanically sanded, then repainted.

Where peeling was the result of using incompatible paints, the peeling top coat should be scraped and hand or mechanically sanded. Application of a high quality oil type exterior primer will provide a surface over which either an oil or a latex topcoat can be successfully used.



Fig. 6 This is an example of intercoat peeling. A latex top coat was applied directly over old oil paint and, as a result, the latex paint was unable to adhere. If latex is being used over oil, an oil-base primer should be applied first. Although much of the peeling latex paint can be scraped off, in this case, the best solution may be to chemically dip strip the entire shutter to remove all of the paint down to bare wood, rinse thoroughly, then repaint. Photo: Mary L. Oehrlein, AIA.

- **Solvent Blistering**

Cause of Condition

Solvent blistering, the result of a less common application error, is not caused by moisture, but by the action of ambient heat on paint solvent or thinners in the paint film. If solvent-rich paint is applied in direct sunlight, the top surface can dry too quickly and, as a result, solvents become trapped beneath the dried paint film. When the solvent vaporizes, it forces its way through the paint film, resulting in surface blisters. This problem occurs more often with dark colored paints because darker colors absorb more heat than lighter ones. To distinguish between solvent blistering and blistering caused by moisture, a blister should be cut open. If another layer of paint is visible, then solvent blistering is likely the problem whereas if bare wood is revealed, moisture is probably to blame. Solvent blisters are generally small.

Recommended Treatment

Solvent-blistered areas can be scraped, hand or mechanically sanded to the next sound layer, then repainted. In order to prevent blistering of painted surfaces, paint should not be applied in direct sunlight.

- **Wrinkling**

Cause of Condition

Another error in application that can easily be avoided is wrinkling (see figure 7). This occurs when the top layer of paint dries before the layer underneath. The top layer of paint actually moves as the paint underneath (a primer, for example) is drying. Specific causes of wrinkling include: (1) applying paint too thick; (2) applying a second coat before the first one dries; (3) inadequate brushing out; and (4) painting in temperatures higher than recommended by the manufacturer.

Recommended Treatment

The wrinkled layer can be removed by scraping followed by hand or mechanical sanding to provide as even a surface as possible, then repainted following manufacturer's application instructions.

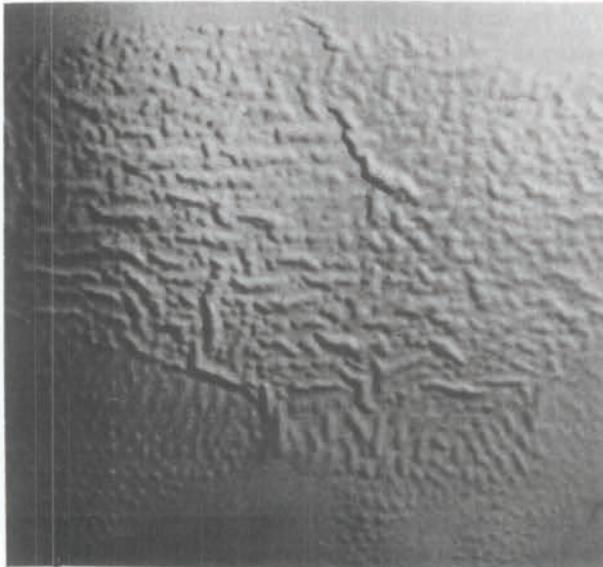


Fig. 7 Wrinkled layers can generally be removed by scraping and sanding as opposed to total paint removal. Following manufacturers' application instructions is the best way to avoid this surface condition. Photo: Courtesy, National Decorating Products Association.

CLASS III Exterior Surface Conditions Generally Requiring Total Paint Removal

If surface conditions are such that the majority of paint will have to be removed prior to repainting, it is suggested that a small sample of intact paint be left in an inconspicuous area either by covering the area with a metal plate, or by marking the area and identifying it in some way. (When repainting does take place, the sample should not be painted over). This will enable future investigators to have a record of the building's paint history.

- **Peeling**

Cause of Condition

Peeling to bare wood is most often caused by excess interior or exterior moisture that collects behind the paint

film, thus impairing adhesion (see figure 8). Generally beginning as blisters, cracking and peeling occur as moisture causes the wood to swell, breaking the adhesion of the bottom layer.

Recommended Treatment

There is no sense in repainting before dealing with the moisture problems because new paint will simply fail. Therefore, the first step in treating peeling is to locate and remove the source or sources of the moisture, not only because moisture will jeopardize the protective coating of paint but because, if left unattended, it can ultimately cause permanent damage to the wood. Excess interior moisture should be removed from the building through installation of exhaust fans and vents. Exterior moisture should be eliminated by correcting the following conditions prior to repainting: faulty flashing; leaking gutters; defective roof shingles; cracks and holes in siding and trim; deteriorated caulking in joints and seams; and shrubbery growing too close to painted wood. After the moisture problems have been solved, the wood must be permitted to dry out thoroughly. The damaged paint can then be scraped off with a putty knife, hand or mechanically sanded, primed, and repainted.



Fig. 8 Peeling to bare wood—one of the most common types of paint failure—is usually caused by an interior or exterior moisture problem. Photo: Anne E. Grimmer.

- **Cracking/Alligatoring**

Cause of Condition

Cracking and alligatoring are advanced stages of crazing (see figure 9). Once the bond between layers has been broken due to intercoat paint failure, exterior moisture is able to penetrate the surface cracks, causing the wood to swell and deeper cracking to take place. This process continues until cracking, which forms parallel to grain, extends to bare wood. Ultimately, the cracking becomes an overall pattern of horizontal and vertical breaks in the paint layers that looks like reptile skin; hence, "alligatoring." In advanced stages of cracking and alligatoring, the surfaces will also flake badly.

Recommended Treatment

If cracking and alligatoring are present only in the top layers they can probably be scraped, hand or mechanically sanded to the next sound layer, then repainted. However, if cracking and/or alligatoring have progressed to

bare wood and the paint has begun to flake, it will need to be totally removed. Methods include scraping or paint removal with the electric heat plate, electric heat gun, or chemical strippers, depending on the particular area involved. Bare wood should be primed within 48 hours, then repainted.

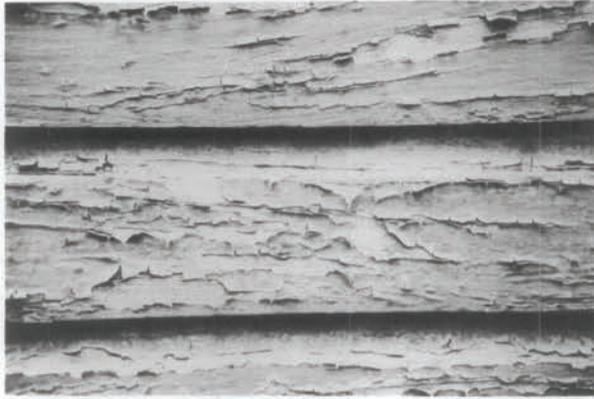


Fig. 9 Cracking, alligatoring, and flaking are evidence of long-term neglect of painted surfaces. The remaining paint on the clapboard shown here can be removed with an electric heat plate and wide-bladed scraper. In addition, unsound wood should be replaced and moisture problems corrected before primer and top coats of paint are applied. Photo: David W. Look, AIA.

Selecting the Appropriate/Safest Method to Remove Paint

After having presented the “hierarchy” of exterior paint surface conditions—from a mild condition such as mildew which simply requires cleaning prior to repainting to serious conditions such as peeling and alligatoring which require total paint removal—one important thought bears repeating: if a paint problem has been identified that warrants either limited or total paint removal, the gentlest method possible for the particular wooden element of the historic building should be selected from the many available methods.

The treatments recommended—based upon field testing as well as onsite monitoring of Department of Interior grant-in-aid and certification of rehabilitation projects—are therefore those which take three over-riding issues into consideration (1) the continued protection and preservation of the historic exterior woodwork; (2) the retention of the sequence of historic paint layers; and (3) the health and safety of those individuals performing the paint removal. By applying these criteria, it will be seen that no paint removal method is without its drawbacks and all recommendations are qualified in varying degrees.

Methods for Removing Paint

After a particular exterior paint surface condition has been identified, the next step in planning for repainting—if paint removal is required—is selecting an appropriate method for such removal.

The method or methods selected should be suitable for the specific paint problem as well as the particular wooden element of the building. Methods for paint removal can be divided into three categories (frequently, however, a combination of the three methods is used).

Each method is defined below, then discussed further and specific recommendations made:

Abrasive—“Abrading” the painted surface by manual and/or mechanical means such as scraping and sanding. Generally used for surface preparation and limited paint removal.

Thermal—Softening and raising the paint layers by applying heat followed by scraping and sanding. Generally used for total paint removal.

Chemical—Softening of the paint layers with chemical strippers followed by scraping and sanding. Generally used for total paint removal.

• Abrasive Methods (Manual)

If conditions have been identified that require limited paint removal such as crazing, intercoat peeling, solvent blistering, and wrinkling, scraping and hand sanding should be the first methods employed before using mechanical means. Even in the case of more serious conditions such as peeling—where the damaged paint is weak and already sufficiently loosened from the wood surface—scraping and hand sanding may be all that is needed prior to repainting.

Recommended Abrasive Methods (Manual)

Putty Knife/Paint Scraper: Scraping is usually accomplished with either a putty knife or a paint scraper, or both. Putty knives range in width from one to six inches and have a beveled edge. A putty knife is used in a pushing motion going under the paint and working from an area of loose paint toward the edge where the paint is still firmly adhered and, in effect, “beveling” the remaining layers so that as smooth a transition as possible is made between damaged and undamaged areas (see figure 10).

Paint scrapers are commonly available in 1½, 2½, and 3½ inch widths and have replaceable blades. In addition, profiled scrapers can be made specifically for use on moldings. As opposed to the putty knife, the paint scraper is used in a pulling motion and works by raking the damaged areas of paint away.

The obvious goal in using the putty knife or the paint scraper is to selectively remove the affected layer or layers of paint; however, both of these tools, particularly the paint scraper with its hooked edge, must be used with care to properly prepare the surface and to avoid gouging the wood.

Sandpaper/Sanding Block/Sanding sponge: After manually removing the damaged layer or layers by scraping, the uneven surface (due to the almost inevitable removal of varying numbers of paint layers in a given area) will need to be smoothed or “feathered out” prior to repainting. As stated before, hand sanding, as opposed to harsher mechanical sanding, is recommended if the area is relatively limited. A coarse grit, open-coat flint sandpaper—the least expensive kind—is useful for this purpose because, as the sandpaper clogs with paint it must be discarded and this process repeated until all layers adhere uniformly.

Blocks made of wood or hard rubber and covered with sandpaper are useful for handsanding flat surfaces. Sanding sponges—rectangular sponges with an abrasive aggregate on their surfaces—are also available for detail work that requires reaching into grooves because the sponge easily conforms to curves and irregular surfaces. All sanding should be done with the grain.

Summary of Abrasive Methods (Manual)

Recommended: Putty knife, paint scraper, sandpaper, sanding block, sanding sponge.

Applicable areas of building: All areas.

For use on: Class I, Class II, and Class III conditions.

Health/Safety factors: Take precautions against lead dust, eye damage; dispose of lead paint residue properly.



Fig. 10 An excellent example of inadequate scraping before repainting, the problems here are far more than cosmetic. This improperly prepared surface will permit moisture to get behind the paint film which, in turn, will result in chipping and peeling. Photo: Baird M. Smith, AIA.

• Abrasive Methods (Mechanical)

If hand sanding for purposes of surface preparation has not been productive or if the affected area is too large to consider hand sanding by itself, mechanical abrasive methods, i.e., power-operated tools may need to be employed; however, it should be noted that the majority of tools available for paint removal can cause damage to fragile wood and must be used with great care.

Recommended Abrasive Methods (Mechanical)

Orbital sander: Designed as a finishing or smoothing tool—not for the removal of multiple layers of paint—the orbital sander is thus recommended when limited paint removal is required prior to repainting. Because it sands in a small diameter circular motion (some models can also be switched to a back-and-forth vibrating action), this tool is particularly effective for “feathering” areas where paint has first been scraped (see figure 11). The abrasive surface varies from about 3×7 inches to 4×9 inches and sandpaper is attached either by clamps or sliding clips. A medium grit, open-coat aluminum oxide sandpaper should be used; fine sandpaper clogs up so quickly that it is ineffective for smoothing paint.

Belt sander: A second type of power tool—the belt sander—can also be used for removing limited layers of paint but,

in this case, the abrasive surface is a continuous belt of sandpaper that travels at high speeds and consequently offers much less control than the orbital sander. Because of the potential for more damage to the paint or the wood, use of the belt sander (also with a medium grit sandpaper) should be limited to flat surfaces and only skilled operators should be permitted to operate it within a historic preservation project.



Fig. 11 The orbital sander can be used for limited paint removal, i.e., for smoothing flat surfaces after the majority of deteriorated paint has already been scraped off. Photo: Charles E. Fisher, III.

Not Recommended

Rotary Drill Attachments: Rotary drill attachments such as the rotary sanding disc and the rotary wire stripper should be avoided. The disc sander—usually a disc of sandpaper about 5 inches in diameter secured to a rubber based attachment which is in turn connected to an electric drill or other motorized housing—can easily leave visible circular depressions in the wood which are difficult to hide, even with repainting. The rotary wire stripper—clusters of metals similarly attached to an electric drill-type unit—can actually shred a wooden surface and is thus to be used exclusively for removing corrosion and paint from metals.

Waterblasting: Waterblasting above 600 p.s.i. to remove paint is not recommended because it can force water into the woodwork rather than cleaning loose paint and grime from the surface; at worst, high pressure waterblasting causes the water to penetrate exterior sheathing and damages interior finishes. A detergent solution, a medium soft bristle brush, and a garden hose for purposes of rinsing, is the gentlest method involving water and is recommended when cleaning exterior surfaces prior to repainting.

Sandblasting: Finally—and undoubtedly most vehemently “not recommended”—sandblasting painted exterior woodwork will indeed remove paint, but at the same time can scar wooden elements beyond recognition. As with rotary wire strippers, sandblasting erodes the soft porous fibers (spring wood) faster than the hard, dense fibers (summer wood), leaving a pitted surface with ridges and valleys. Sandblasting will also erode projecting areas of carvings and moldings before it removes paint from concave areas (see figure 12). Hence, this abrasive method is potentially the most damaging of all possibilities, even if a contractor promises that blast pressure can be controlled so that the paint is removed without harming the historic exterior woodwork. (For Additional Information, See Preservation Briefs 6, “Dangers of Abrasive Cleaning to Historic Buildings”.)



Fig. 12 Sandblasting has permanently damaged this ornamental bracket. Even paint will not be able to hide the deep erosion of the wood. Photo: David W. Look, AIA.

Summary of Abrasive Methods (Mechanical)

Recommended: Orbital sander, belt sander (skilled operator only).

Applicable areas of building: Flat surfaces, i.e., siding, eaves, doors, window sills.

For use on: Class II and Class III conditions.

Health/Safety factors: Take precautions against lead dust and eye damage; dispose of lead paint residue properly.

Not Recommended: Rotary drill attachments, high pressure waterblasting, sandblasting.

• Thermal Methods

Where exterior surface conditions have been identified that warrant total paint removal such as peeling, cracking, or alligating, two thermal devices—the electric heat plate and the electric heat gun—have proven to be quite successful for use on different wooden elements of the historic building. One thermal method—the blow torch—is not recommended because it can scorch the wood or even burn the building down!

Recommended Thermal Methods

Electric heat plate: The electric heat plate (see figure 13) operates between 500 and 800 degrees Fahrenheit (not hot enough to vaporize lead paint), using about 15 amps of power. The plate is held close to the painted exterior surface until the layers of paint begin to soften and blister, then moved to an adjacent location on the wood while the softened paint is scraped off with a putty knife (it should be noted that the heat plate is most successful when the paint is very thick!). With practice, the operator can successfully move the heat plate evenly across a flat surface such as wooden siding or a window sill or door in a continuous motion, thus lessening the risk of scorching the wood in an attempt to reheat the edge of the paint sufficiently for effective removal. Since the electric heat plate’s coil is “red hot,” extreme caution should be taken to avoid igniting clothing or burning the skin. If an extension cord is used, it should be a heavy-duty cord (with 3-prong grounded plugs). A heat plate could overload a circuit or, even worse, cause an electrical fire; therefore, it is recommended that this implement be used with a single circuit and that a fire extinguisher always be kept close at hand.



Fig. 13 The electric heat plate (with paint scraper) is particularly useful for removing paint down to bare wood on flat surfaces such as doors, window frames, and siding. After scraping, some light sanding will probably be necessary to smooth the surface prior to application of primer and top coats. Photo: David W. Look, AIA.

Electric heat gun: The electric heat gun (electric hot-air gun) looks like a hand-held hairdryer with a heavy-duty metal case (see figure 14). It has an electrical resistance coil that typically heats between 500 and 750 degrees Fahrenheit and, again, uses about 15 amps of power which requires a heavy-duty extension cord. There are some heat guns that operate at higher temperatures but they should not be purchased for removing old paint

because of the danger of lead paint vapors. The temperature is controlled by a vent on the side of the heat gun. When the vent is closed, the heat increases. A fan forces a stream of hot air against the painted woodwork, causing a blister to form. At that point, the softened paint can be peeled back with a putty knife. It can be used to best advantage when a paneled door was originally varnished, then painted a number of times. In this case, the paint will come off quite easily, often leaving an almost pristine varnished surface behind. Like the heat plate, the heat gun works best on a heavy paint build-up. (It is, however, not very successful on only one or two layers of paint or on surfaces that have only been varnished. The varnish simply becomes sticky and the wood scorches.)

Although the heat gun is heavier and more tiring to use than the heat plate, it is particularly effective for removing paint from detail work because the nozzle can be directed at curved and intricate surfaces. Its use is thus more limited than the heat plate, and most successfully used in conjunction *with* the heat plate. For example, it takes about two to three hours to strip a paneled door with a heat gun, but if used in combination with a heat plate for the large, flat area, the time can usually be cut in half. Although a heat gun seldom scorches wood, it can cause fires (like the blow torch) if aimed at the dusty cavity between the exterior sheathing and siding and interior lath and plaster. A fire may smolder for hours before flames break through to the surface. Therefore, this thermal device is best suited for use on solid decorative elements, such as molding, balusters, fretwork, or "gingerbread."



Fig. 14 The nozzle on the electric heat gun permits hot air to be aimed into cavities on solid decorative elements such as this applied column. After the paint has been sufficiently softened, it can be removed with a profiled scraper. Photo: Charles E. Fisher, III.

Not Recommended

Blow Torch: Blow torches, such as hand-held propane or butane torches, were widely used in the past for paint removal because other thermal devices were not available. With this technique, the flame is directed toward the paint until it begins to bubble and loosen from the surface. Then the paint is scraped off with a putty knife. Although this is a relatively fast process, at temperatures between 3200 and 3800 degrees Fahrenheit the open flame is not only capable of burning a careless operator and causing severe damage to eyes or skin, it can easily scorch or ignite the wood. The other fire hazard is more insidious. Most frame buildings have an air space between the exterior sheathing and siding and interior lath and plaster. This cavity usually has an accumulation of dust which is also easily ignited by the open flame of a blow torch. Finally, lead-base paints will vaporize at high temperatures, releasing toxic fumes that can be unknowingly inhaled. Therefore, because both the heat plate and the heat gun are generally safer to use—that is, the risks are much more controllable—the blow torch should definitely be avoided!

Summary of Thermal Methods

Recommended: Electric heat plate, electric heat gun.

Applicable areas of building: Electric heat plate—flat surfaces such as siding, eaves, sash, sills, doors. Electric heat gun—solid decorative molding, balusters, fretwork, or "gingerbread."

For use on: Class III conditions.

Health/Safety factors: Take precautions against eye damage and fire. Dispose of lead paint residue properly.

Not Recommended: Blow torch.

• Chemical Methods

With the availability of effective thermal methods for total paint removal, the need for chemical methods—in the context of preparing historic exterior woodwork for repainting—becomes quite limited. Solvent-base or caustic strippers may, however, play a supplemental role in a number of situations, including:

- Removing paint residue from intricate decorative features, or in cracks or hard to reach areas if a heat gun has not been completely effective;
- Removing paint on window muntins because heat devices can easily break the glass;
- Removing varnish on exterior doors after all layers of paint have been removed by a heat plate/heat gun if the original varnish finish is being restored;
- Removing paint from detachable wooden elements such as exterior shutters, balusters, columns, and doors by dip-stripping when other methods are too laborious.

Recommended Chemical Methods (Use With Extreme Caution)

Because all chemical paint removers can involve potential health and safety hazards, no wholehearted recommendations can be made from that standpoint. Commonly known as "paint removers" or "strippers," both solvent-base or caustic products are commercially available that, when poured, brushed, or sprayed on painted exterior woodwork are capable of softening several layers of paint at a time so that the resulting "sludge"—which should be remembered is nothing less than the sequence of historic

paint layers—can be removed with a putty knife. Detachable wood elements such as exterior shutters can also be “dip-stripped.”

Solvent-base Strippers: The formulas tend to vary, but generally consist of combinations of organic solvents such as methylene chloride, isopropanol, toluol, xylol, and methanol; thickeners such as methyl cellulose; and various additives such as paraffin wax used to prevent the volatile solvents from evaporating before they have time to soak through multiple layers of paint. Thus, while some solvent-base strippers are quite thin and therefore unsuitable for use on vertical surfaces, others, called “semi-paste” strippers, are formulated for use on vertical surfaces or the underside of horizontal surfaces.

However, whether liquid or semi-paste, there are two important points to stress when using any solvent-base stripper: First, the vapors from the organic chemicals can be highly toxic if inhaled; skin contact is equally dangerous because the solvents can be absorbed; second, many solvent-base strippers are flammable. Even though application out-of-doors may somewhat mitigate health and safety hazards, a respirator with special filters for organic solvents is recommended and, of course, solvent-base strippers should never be used around open flames, lighted cigarettes, or with steel wool around electrical outlets.

Although appearing to be the simplest for exterior use, a particular type of solvent-base stripper needs to be mentioned here because it can actually cause the most problems. Known as “water-rinsable,” such products have a high proportion of methylene chloride together with emulsifiers. Although the dissolved paint can be rinsed off with water with a minimum of scraping, this ultimately creates more of a problem in cleaning up and properly disposing of the sludge. In addition, these strippers can leave a gummy residue on the wood that requires removal with solvents. Finally, water-rinsable strippers tend to raise the grain of the wood more than regular strippers.

On balance, then, the regular strippers would seem to work just as well for exterior purposes and are perhaps even better from the standpoint of proper lead sludge disposal because they must be hand scraped as opposed to rinsed off (a coffee-can with a wire stretched across the top is one effective way to collect the sludge; when the putty knife is run across the wire, the sludge simply falls into the can. Then, when the can is filled, the wire is removed, the can capped, and the lead paint sludge disposed of according to local health regulations).

Caustic Strippers: Until the advent of solvent-base strippers, caustic strippers were used exclusively when a chemical method was deemed appropriate for total paint removal prior to repainting or refinishing. Now, it is more difficult to find commercially prepared caustic solutions in hardware and paint stores for home-owner use with the exception of lye (caustic soda) because solvent-base strippers packaged in small quantities tend to dominate the market.

Most commercial dip stripping companies, however, continue to use variations of the caustic bath process because it is still the cheapest method available for removing paint. Generally, dip stripping should be left to professional companies because caustic solutions can dissolve skin and permanently damage eyes as well as present serious disposal problems in large quantities.

If exterior shutters or other detachable elements are be-

ing sent out⁶ for stripping in a caustic solution, it is wise to see samples of the company’s finished work. While some companies do a first-rate job, others can leave a residue of paint in carvings and grooves. Wooden elements may also be soaked too long so that the wood grain is raised and roughened, requiring extensive hand sanding later. In addition, assurances should be given by these companies that caustic paint removers will be neutralized with a mild acid solution or at least thoroughly rinsed with water after dipping (a caustic residue makes the wood feel slippery). If this is not done, the lye residue will cause new paint to fail.

Summary of Chemical Methods

Recommended, with extreme caution: Solvent-base strippers, caustic strippers.

Applicable areas of buildings: decorative features, window muntins, doors, exterior shutters, columns, balusters, and railings.

For use on: Class III Conditions.

Health/Safety factors: Take precautions against inhaling toxic vapors; fire; eye damage; and chemical poisoning from skin contact. Dispose of lead residue properly

General Paint Type Recommendations

Based on the assumption that the exterior wood has been painted with oil paint many times in the past and the existing top coat is therefore also an oil paint,* it is recommended that for CLASS I and CLASS II paint surface conditions, a top coat of high quality oil paint be applied when repainting. The reason for recommending oil rather than latex paints is that a coat of latex paint applied directly over old oil paint is more apt to fail. The considerations are twofold. First, because oil paints continue to harden with age, the old surface is sensitive to the added stress of shrinkage which occurs as a new coat of paint dries. Oil paints shrink less upon drying than latex paints and thus do not have as great a tendency to pull the old paint loose. Second, when exterior oil paints age, the binder releases pigment particles, causing a chalky surface. Although for best results, the chalk (or dirt, etc.) should *always* be cleaned off prior to repainting, a coat of new oil paint is more able to penetrate a chalky residue and adhere than is latex paint. Therefore, unless it is possible to thoroughly clean a heavy chalked surface, oil paints—on balance—give better adhesion.

If however, a latex top coat is going to be applied over several layers of old oil paint, an oil primer should be applied first (the oil primer creates a flat, porous surface to which the latex can adhere). After the primer has thoroughly dried, a latex top coat may be applied. In the long run, changing paint types is more time consuming and expensive. An application of a new oil-type top coat on the old oil paint is, thus, the preferred course of action.

⁶ Marking the original location of the shutter by number (either by stamping numbers into the end grain with metal numeral dies or cutting numbers into the end with a pen knife) will minimize difficulties when rehanging them.

⁷ If the top coat is latex paint (when viewed by the naked eye or, preferably, with a magnifying glass, it looks like a series of tiny craters) it may either be repainted with new latex paint or with oil paint. Normal surface preparation should precede any repainting.

If CLASS III conditions have necessitated total paint removal, there are two options, both of which assure protection of the exterior wood: (1) an oil primer may be applied followed by an oil-type top coat, preferably by the same manufacturer; or (2) an oil primer may be applied followed by a latex top coat, again using the same brand of paint. It should also be noted that primers were never intended to withstand the effects of weathering; therefore, the top coat should be applied as soon as possible after the primer has dried.

Conclusion

The recommendations outlined in this Brief are cautious because at present there is no completely safe and effective method of removing old paint from exterior woodwork. This has necessarily eliminated descriptions of several methods still in a developmental or experimental stage, which can therefore neither be recommended nor precluded from future recommendation. With the ever-increasing number of buildings being rehabilitated, however, paint removal technology should be stimulated and, in consequence, existing methods refined and new methods developed which will respect both the historic wood and the health and safety of the operator.

Special thanks go to Baird M. Smith, AIA (formerly Chief, Preservation Technology Branch, TPS) for providing general direction in the development of the manuscript. In addition, the following individuals are to be thanked for their contributions as technical experts in the field: Royal T. Brown, National Paint and Coatings Association, Washington, D.C.; Dr. Judith E. Selwyn, Preservation Technology Associates, Boston, Massachusetts; and Dennis R. Vacca, Pratt & Lambert Co., Carlstadt, New Jersey. Finally, thanks go to several National Park Service staff members whose valuable comments were incorporated into the text and who contributed to the production of the brief: James A. Caulfield, Anne E. Grimmer, Jean E. Travers, David G. Battle, Sharon C. Park, AIA, Charles E. Fisher III, Sara K. Blumenthal, and Martha A. Gutrick.

Reading List

- Batcheler, Penelope Hartshorne, "Paint Color Research and Restoration." *Technical Leaflet 15*. Nashville: American Association for State and Local History (undated).
- "Danger: Restoration May Be Hazardous to Your Health." *The Old House Journal*. Vol. 4, No. 5 (May 1976), pp. 9-11.
- Gola, Edward F. "Avoiding Mistakes in Exterior Painting." *The Old House Journal*. Vol. 4, No. 6 (June 1976), pp. 1, 4-5.
- "How to Assure a Satisfactory Paint Job." *Scientific Section: Circular 784*. Washington, DC: National Paint, Varnish and Lacquer Association (undated).
- Labine, Clem. "Selecting the Best Exterior Paint." *The Old House Journal*. Vol. 4, No. 7 (July 1976), pp. 1, 10-11.
- Morton, W. Brown III and Hume, Gary L. *The Secretary of the Interior's Standards for Historic Preservation Projects with Guidelines for Applying the Standards*. Washington, DC: Department of Interior, 1979.
- Paint Problem Solver*. St. Louis: National Decorating Products Association, 1980.
- "Special Issue: Exterior Painting." *The Old House Journal*. Vol. 4, No. 4 (April 1981), pp. 71-94.
- Thorsen, John W. "Hazardous Waste: What is it? How to Handle it." *Professional Decorating & Coating Action*. Vol. 43, No. 4 (September 1981), pp. 4-5.

This publication has been prepared pursuant to The Economic Recovery Tax Act of 1981, which directs the Secretary of the Interior to certify rehabilitations of historic buildings that are consistent with their historic character; the advice and guidance in this brief will assist property owners in complying with the requirements of this law.

Preservation Briefs 10 has been developed under the technical editorship of Lee H. Nelson, AIA, Chief, Preservation Assistance Division, National Park Service, U.S. Department of the Interior, Washington, D.C. 20240. Comments on the usefulness of this information are welcomed and can be sent to Mr. Nelson at the above address.

This publication is not copyrighted and can be reproduced without penalty. Normal procedures for credit to the authors and the National Park Service are appreciated.

September 1982

For sale by the Superintendent of Documents, U.S. Government Printing Office
Washington, D.C. 20402